

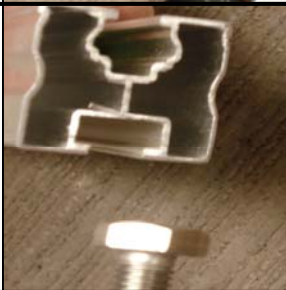
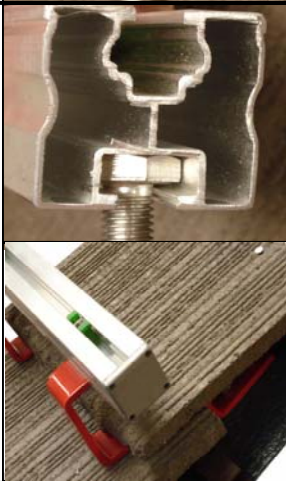





## Installation Instructions

1		<p>Mount the bracket to the surface of the roof deck through the sheathing and into a rafter. Tighten the 3/8" by 3" lag bolts</p>
2		<p>Install the tile over the bracket so that it lays flat. Notch out the tile weather checks where the Solar Tile Brackets touch.</p>
3		<p>Bolt slides into the solar bar.</p>
4		<p>After the bolt is installed in the bar, secure the bolt to the Solar Tile Bracket.</p>
5		<p>Twist on the nut and tighten.</p>